

DK8051RC User's Guide

(Version 3.0)





Table of Contents

- 1. Components
- 2. How to configure hardware?
- 3. How to install firmware?
- 4. How to use?
- 5. FAQ



1. Components

Item		Quantity	Remarks	
MB-EVB8051		1	Rev 3.1	
NM7010A		1	Rev 1.1	
RC Module		1	Rev 2.0	
220V Cable	220V Power	1	220V Power Cable	
	220V Outlet	2	220V Outlet Cable	
UTP Cable		1	Cross Cable	
Serial Cable		1	Cross Cable	
5V Adapter		1	Power Adapter	
CD		1	Software CD for Remote Controller	



2. How to configure hardware?

① Connect RC Module's CN2 to EVB8051's J1



② Connect 220V Outlet Cable to two among <u>CON1, CON2, CON3</u> of RC Module respectively and connect device which is to be controlled to outlet (let it turn on the device). And then, Connect 220V Power Cable which is connected to RC Module's <u>CN1</u> to 220V power





③ Connect <u>EVB8051's U8</u> to PC's NIC(Network Interface Card, LAN Card) with UTP cable(Cross cable)



④ <u>Connect 5V Power Adapter to EVB8051's J3</u>





3. How to install firmware?

Refer to EVB8051 User's Manual

- 2.2.2 Web Server Test
- 3.2.4 Web Server source codes



4. How to use?

- 1 After Firmware installation, run web browser on PC
- ② Input <u>http://192.168.0.2</u> on browser's URL field
- ③ LCD TEST
 - A. Write some text in text field on the browser for LCD testing and click "OK" button (Possible to enter only alphanumeric characters).

	(8051 EVB) == 보기(火) 플겨찾기(A) ② 같 슈 ③ 경색 1.171.137.38 8051 Evaluati	57() 5 बि≣येष्ट्रेय ion Boa	हिष्ट(U) अदिवर्धग ard for i	<u>I</u> S- ∦- ⊆ 2Chip	
LCD TEXTBOX (<16)	TESTIII	80	51 LED	⊏ SW I⊂ SW I⊂ SW	#1 #2 #3
		OK			
완료				🔮 인터넷	.

B. Check it out to make sure whether the text is displayed on LCD of EVB8051 correctly.



- ④ Remote Controller TEST
 - A. Select a check box with free choice on the web page.



B. Check whether a device which is connected to Relay Board be turned ON/OFF.



5. FAQ

- 1 1 Timeout occurs on PING execution for testing Ethernet connection.
 - -> Check whether the UTP cable is correctly connected to U8.
 - -> Provided UTP cable is cross type for direct connection. So you cannot use it for connecting to hub. In stead of it, please use normal UTP cable.
- ② Cannot connect to web page of EVB8051.

-> After Turning the power of Remote Controller Application Module on and pressing SW4 (reset) button, try to reconnect to web page.

- ③ Cannot control the power of devices
 - -> First, check whether the power cable of Remote Controller Application Module is correctly connected to power source.
 - -> Check whether the power switch of the device which is to be controlled is turned on