

Table of Contents

WIZ750SR-110 Datasheet	1
Hardware Specification	1
Product Spec Table	1
WIZ750SR-110 Callout	2
WIZ750SR-110 Pinout	2
WIZ750SR-110 indicate	3
WIZ750SR-110 Block Diagram	4
Schematic & Artwork	4
WIZ750SR-110	4
Part list	4
WIZ750SR-110	4
Electrical Characteristics	5
Operating Conditions	5
Flash Memory	5
EEPROM	5
Connector Specification	5
Data D-SUB9 Connector (P2)	5
BOOT Pin (J4, J5)	7
SWD(JTAG) Pin (J3)	7
ISP Port & Expansion GPIO (J1, J2)	8
RJ-45 Connector (BS-RB10005)	9
Dimension	10
Navigation	10

WIZ750SR-110 Datasheet

Supported Languages

- English only




Hardware Specification


Product Spec Table


Category		Description
MCU	ARM Cortex-M0 Core	W7500 48Mhz maximum frequency Internal 8Mhz RC Oscillator Flash: 128KB Large flexible-size SRAM buffer for various User Application - Min 16KB available if full 32KB socket buffer used - Max 48KB available if no socket buffer used ROM for boot code: 6 KB
	Hardwired TCP/IP Core	8 independent Sockets SRAM for socket: 32KB MII (Medium-Independent Interface) TCP/IP Protocols: TCP, UDP, ICMP, IPv4, ARP, IGMP, PPPoE
PHY	Transceiver	IP101GRI Single 10/100M Ethernet Transceiver
Serial	Signal	TXD, RXD, RTS, CTS, GND
	Parameters	Parity: None, Odd, Even Data bits: 7, 8 bit Flow control: None, RTS / CTS, XON / XOFF
	Speed	Up to 230Kbps
Dimension		62mm x 40mm (PCB board size) 62mm x 40mm x 18mm (Include part size)
Connector type		RJ-45(Ethernet Connector) D-sub9 Connector(RS-232C)
Input Voltage		DC 5V, 100mA under
Temperature		-40°C ~ 85°C (Operation), -40°C ~ 85°C (Storage range)

WIZ750SR-110 Callout

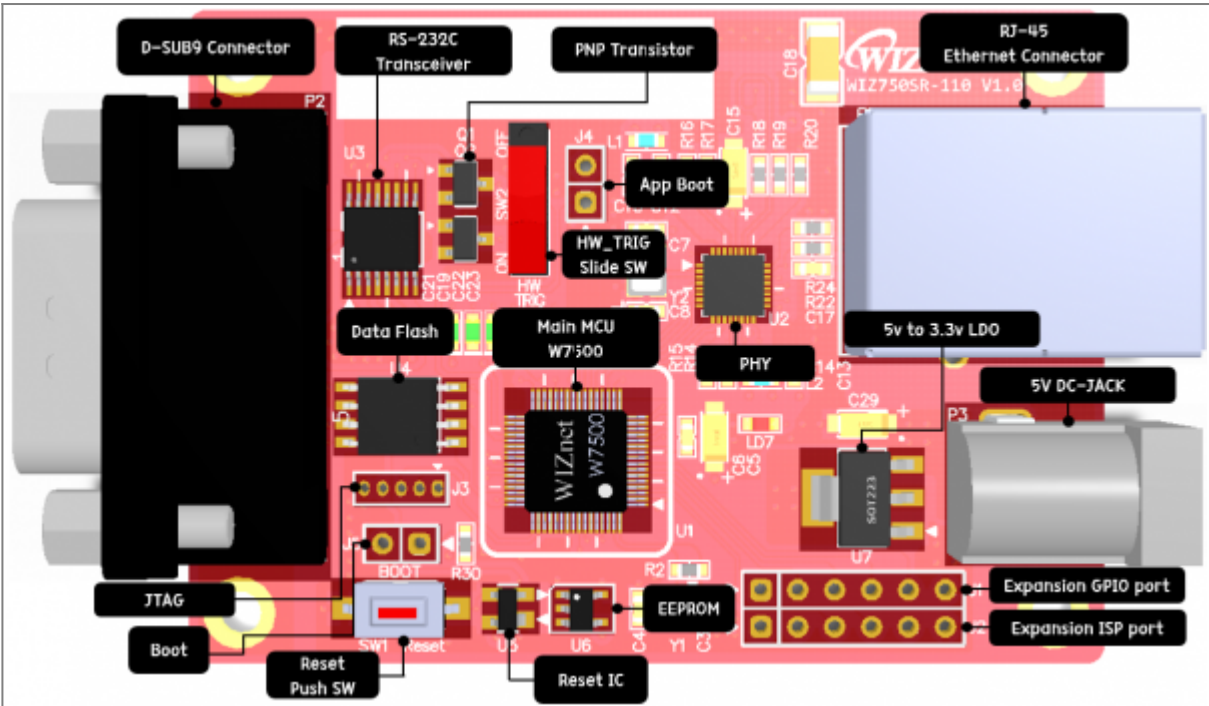


TOP

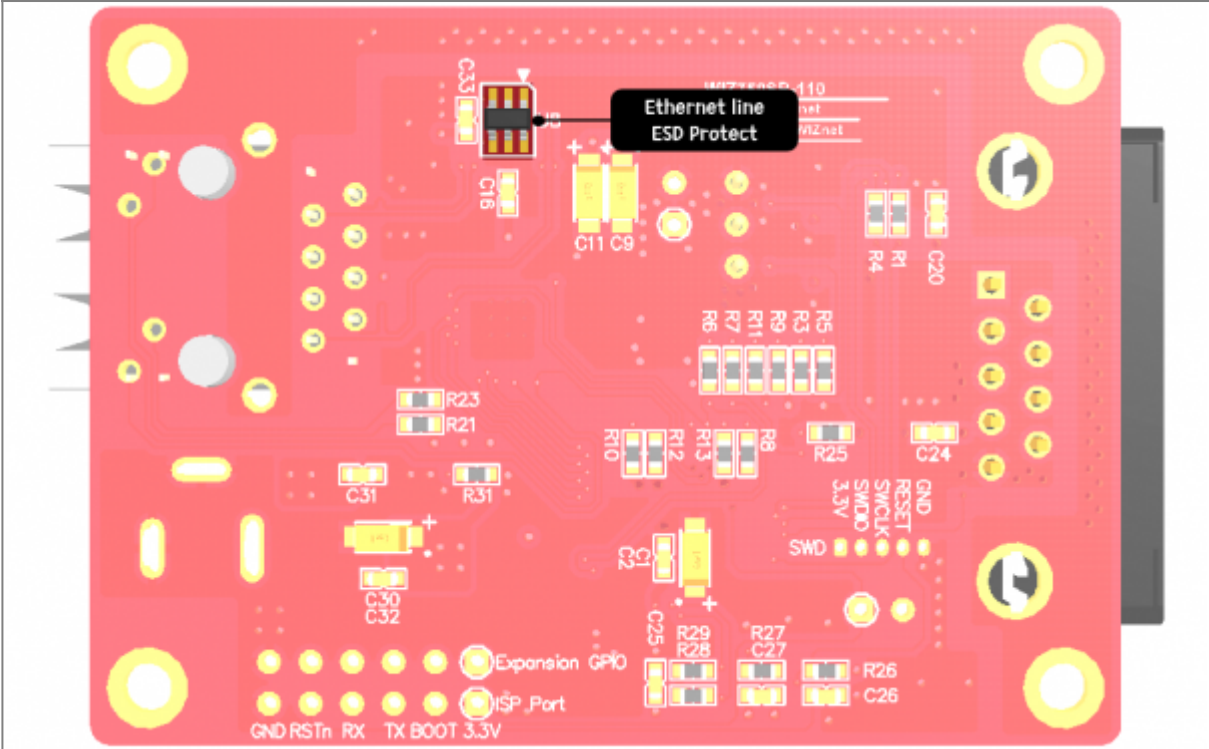

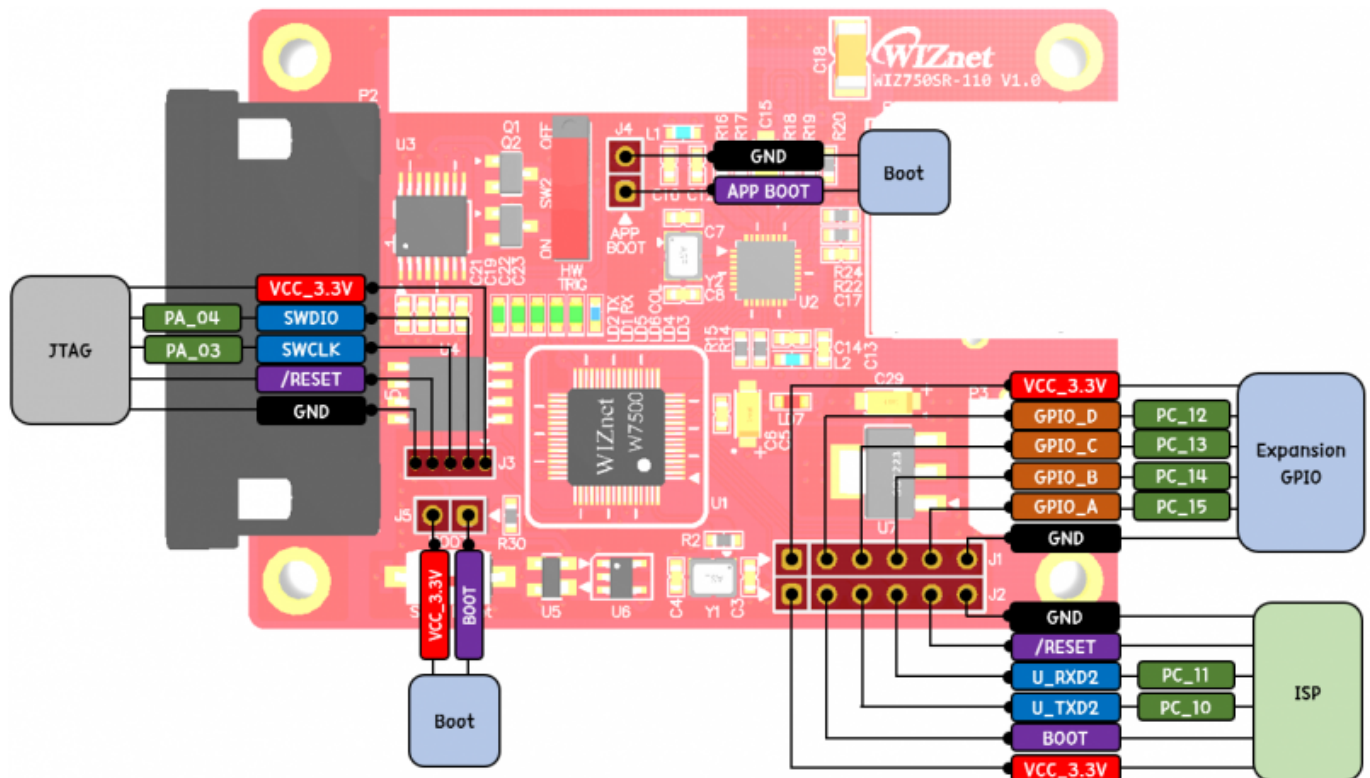


WIZ750SR-110 indicate

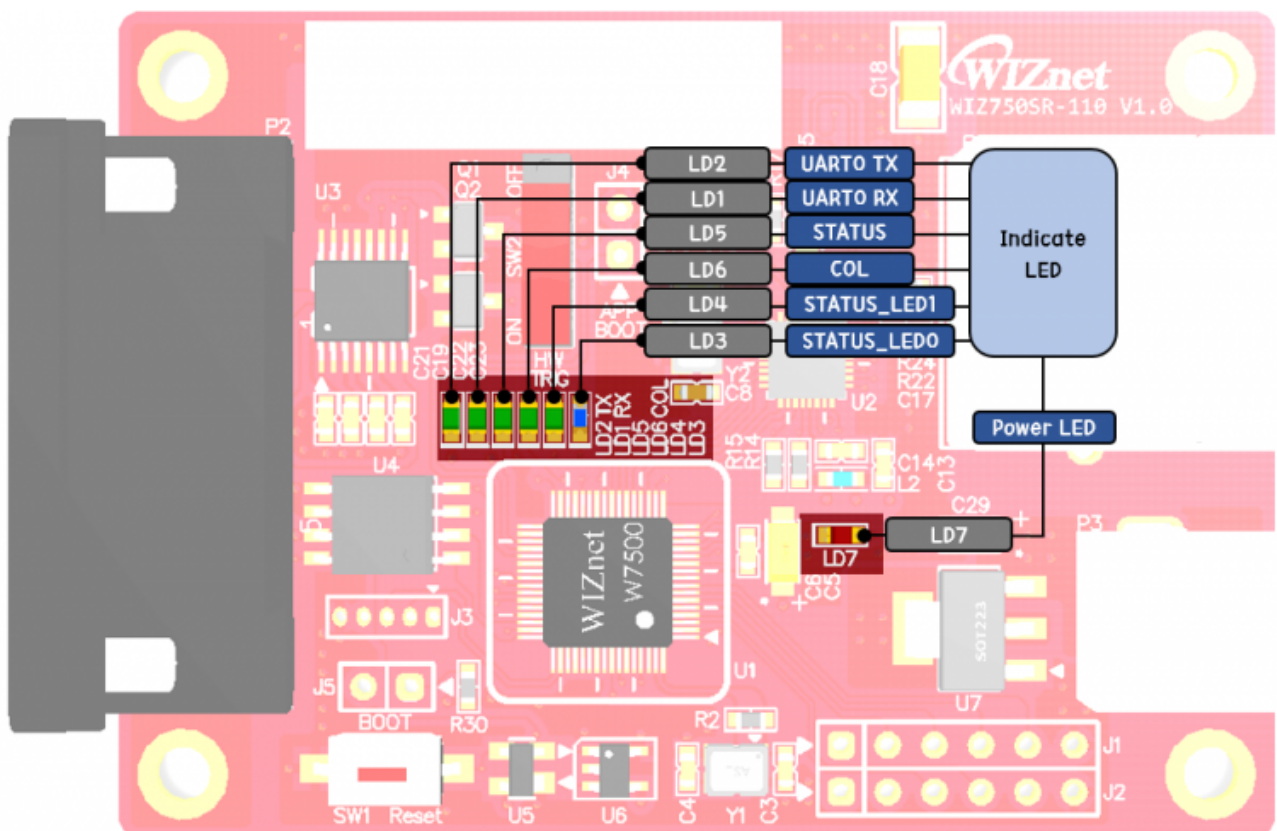

Pin Number	Pin Name	Signal	Description
1	LD1	UART0 RX	UART receiver indicate
2	LD2	UART0 TX	UART Transceiver indicate
3	LD3	Status_LED0	PHY LINK check or initialize done

Pin Number	Pin Name	Signal	Description
4	LD4	Status_LED1	TCP Connection
5	LD5	STATUS	Not function
6	LD6	COL	Collision Detected
7	LD7	Power LED	-

WIZ750SR-110 Block Diagram

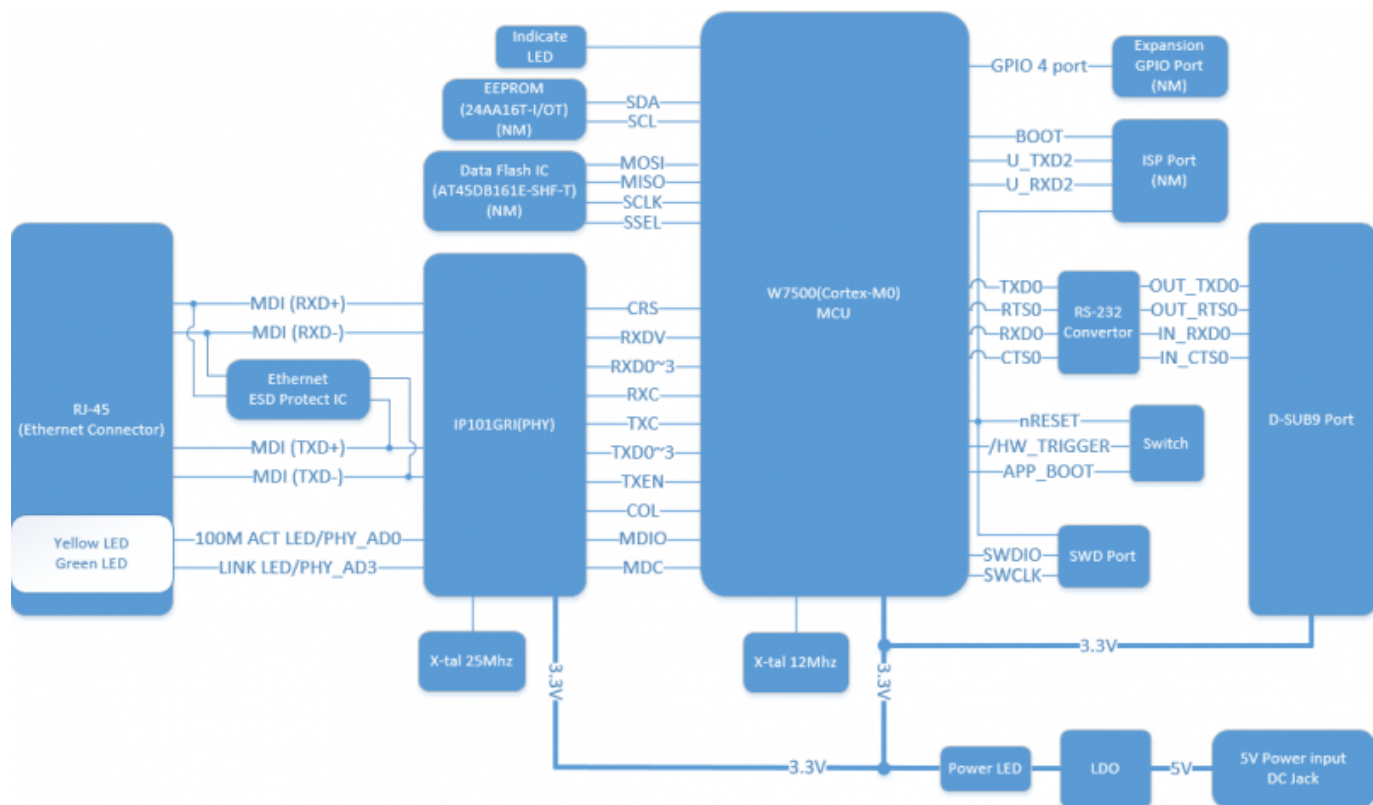

Schematic & Artwork

WIZ750SR-110

H/W version	Type	Filetype	Download Link	Remarks
1.0	RS232	Altium	Download	-
		PDF	Download	-

Part list

WIZ750SR-110

H/W version	Type	Filetype	Download Link	Remarks
1.0	RS232	Excel	 Download	-
		PDF	 Download	-

Electrical Characteristics

Operating Conditions

Symbol	Parameter	Pins	Min	Typ	Max	Unit
Vcc	Operating Voltage	3.3V	3.135	3.3	3.465	V
Vss	Ground	ALL		0	50	mV
fFCLK	Internal CPU clock frequency	ALL	0	-	48	MHz
Tstg	Storage Temperature (max)	ALL	-40		85	°C
TA	Ambient operating temperature	ALL	-40	85		°C
VIO	I/O Signal voltage (Tolerance)	ALL	Vss-0.3	3.3	5	V
VIH	Input high voltage	ALL	2.5			V
VIL	Input low voltage	ALL			0.6	V
VOH	Output high voltage (High driving strength Current load = 6mA) (Low driving strength Current load = 3mA)	ALL	2.83			V
VOL	Output high voltage (High driving strength Current load = 6mA) (Low driving strength Current load = 3mA)	ALL			0.32	V

Flash Memory

Symbol	Parameter	Min	Unit
NEND	Sector Endurance	10,000	Cycles
TDR	Data Retention	10	Years


EEPROM

Symbol	Parameter	Min	Unit
NEND	Sector Endurance	1M	Cycles
TDR	Data Retention	200	Years

Connector Specification

Data D-SUB9 Connector (P2)

DB9M Connector

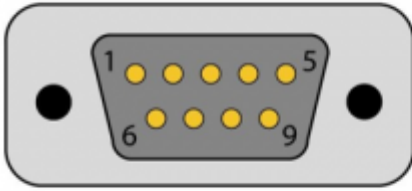

RS-232 Pinout


Pin#	Signal
1	NC
2	RX
3	TX
4	NC
5	GND
6	NC
7	RTS
8	CTS
9	NC

Pin Number	Signal	Description
1	DCD	NC
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	NC
5	GND	System Ground(Signal Ground)
6	DSR	NC
7	RTS	Request To Send
8	CTS	Clear To Send
9	RI	NC


- WIZ750SR-110 supports only 4 signals. (TXD, RXD, CTS, RTS)
- If you want to use all 9 signals, you have to make them separately. or you must design new hardware
- TXD, RXD, CTS, RTS are provided as peripheral functions.
- And already made DSR and DTR signal in GPIO functions.(WIZ750SR Firmware code)
- Therefore, DCD and RI functions must be created.
- RXD, TXD, GND: These are all you need if the device does not use hardware handshaking.
- RXD, TXD, GND, RTS, CTS: These are the signals used when serial device uses hardware handshaking.
- DTR, DSR: Not used

SIGNAL PIN

PIN SIGNAL

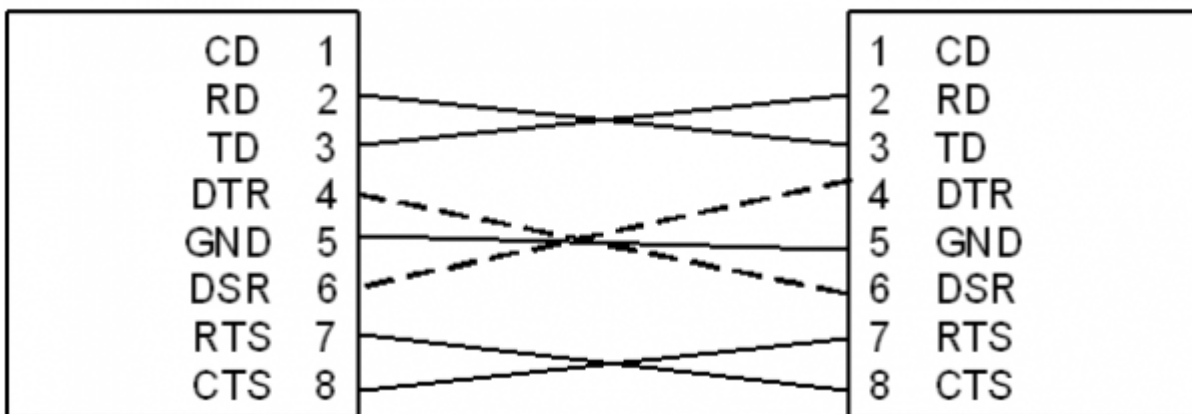


BOOT Pin (J4, J5)

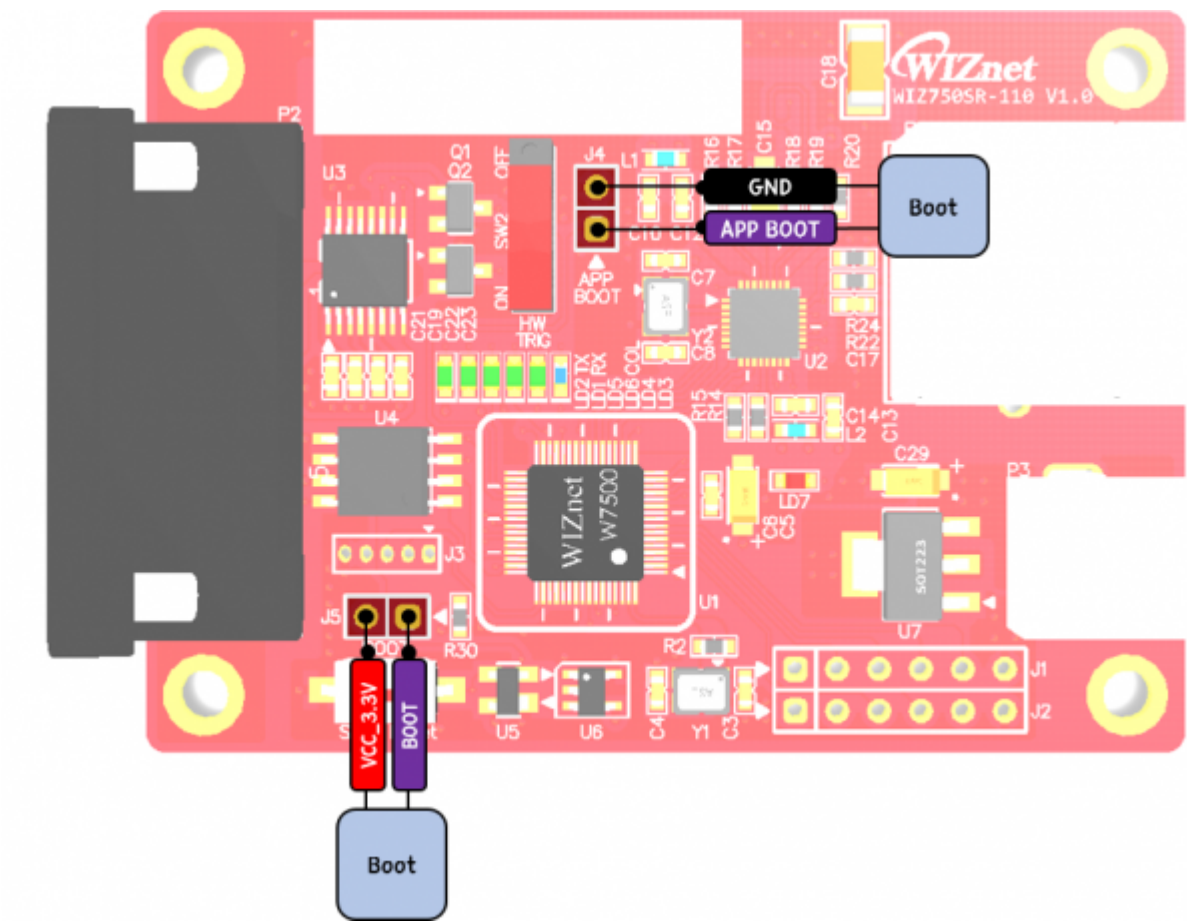


Parts	Pin Number	Signal	Description
J4	1	APP BOOT	Application Jump at BOOT mode
	2	GND	System Ground
Parts	Pin Number	Signal	Description
J5	1	BOOT	System Ground
	2	VCC	System Power (3.3V)

SWD(JTAG) Pin (J3)

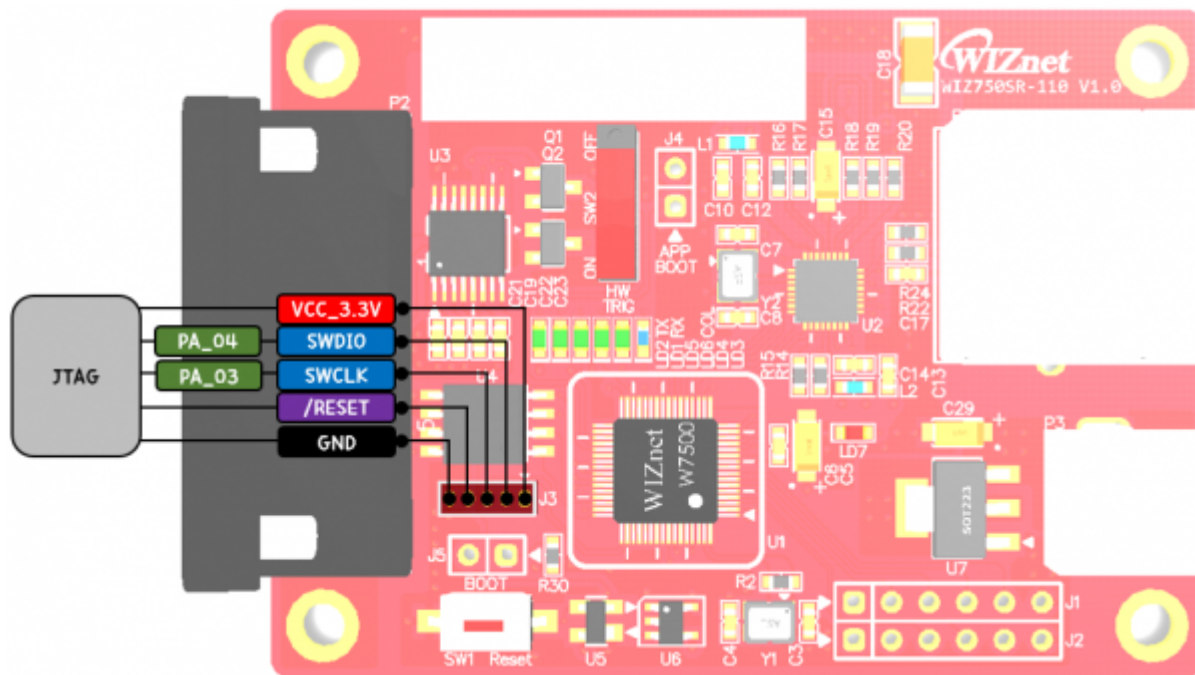


Pin Number	Signal	Description
1	VCC	System Power (3.3V)
2	SWDIO	SWD(JTAG) Data I/O pin
3	SWCLK	SWD(JTAG) Clock pin
4	nRESET	System Reset signal (Active Low)
5	GND	System Ground

ISP Port & Expansion GPIO (J1, J2)

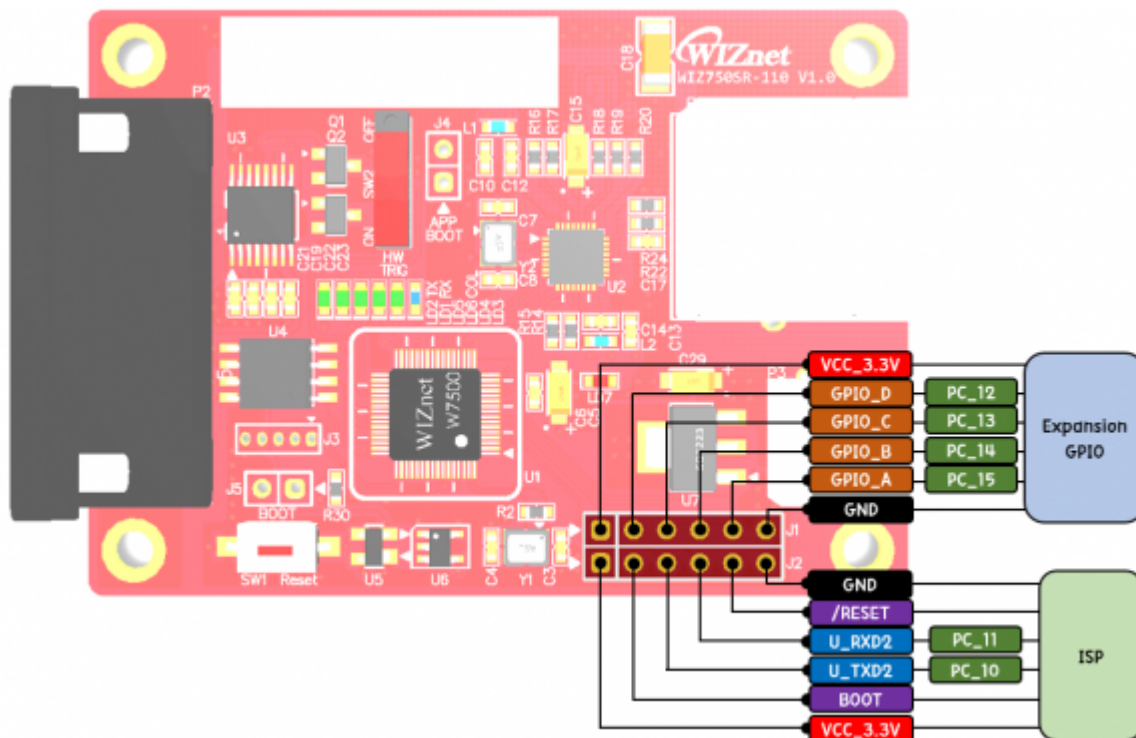

Parts	Pin Number	Signal	Description
J1	1	VCC	System Power (3.3V)
	2	Expansion GPIO D	Expansion User's depend on GPIO port
	3	Expansion GPIO C	
	4	Expansion GPIO B	
	5	Expansion GPIO A	
	6	GND	System Ground
Parts	Pin Number	Signal	Description
J2	1	VCC	System Power (3.3V)
	2	BOOT	BOOT SW
	3	U_TXD2	Simple UART2(Debug port) ISP mode firmware downloader port
	4	U_RXD2	Simple UART2(Debug port) ISP mode firmware downloader port
	5	nRESET	System Reset signal (Active Low)
	6	GND	System Ground

RJ-45 Connector (BS-RB10005)

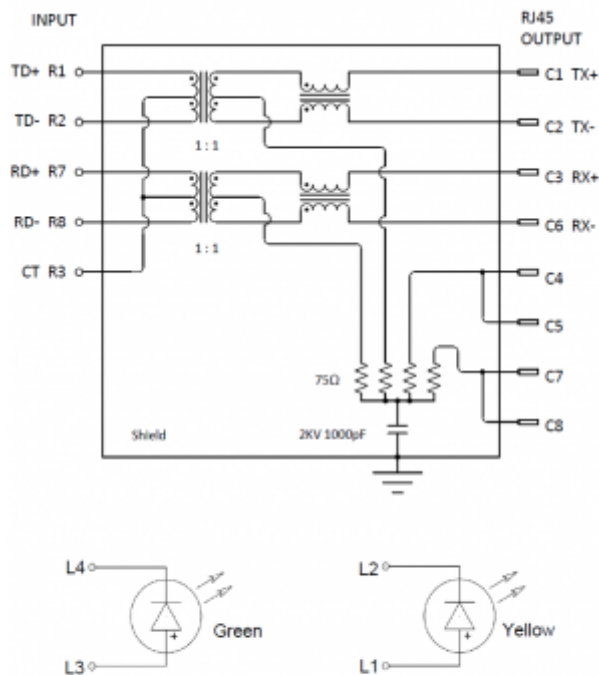


Emitting Color	Ap (nm)	Vf @If=20mA	Ir @Vr=5V
Green	565	1.7 ~2.6 V	10μA max.
Yellow	585	1.7 ~2.6 V	10μA max.

Pin Number	Pin	Signal
1	R1	TX+
2	R2	TX-
3	R3	TCT/RCT(Center tap)
4	R7	RX+
5	R8	RX-
6	L1+(Active LED)	Anode
7	L2- (Active LED)	Cathode

Pin Number	Pin	Signal
8	L3+(LINK LED)	Anode
9	L4- (LINK LED)	Cathode

Dimension

- WIZ750SR-110 Rev1.0 Dimension :
 - 63mm x 45mm (PCB board size)
 - 75mm x 45mm x 18mm (Included part size)

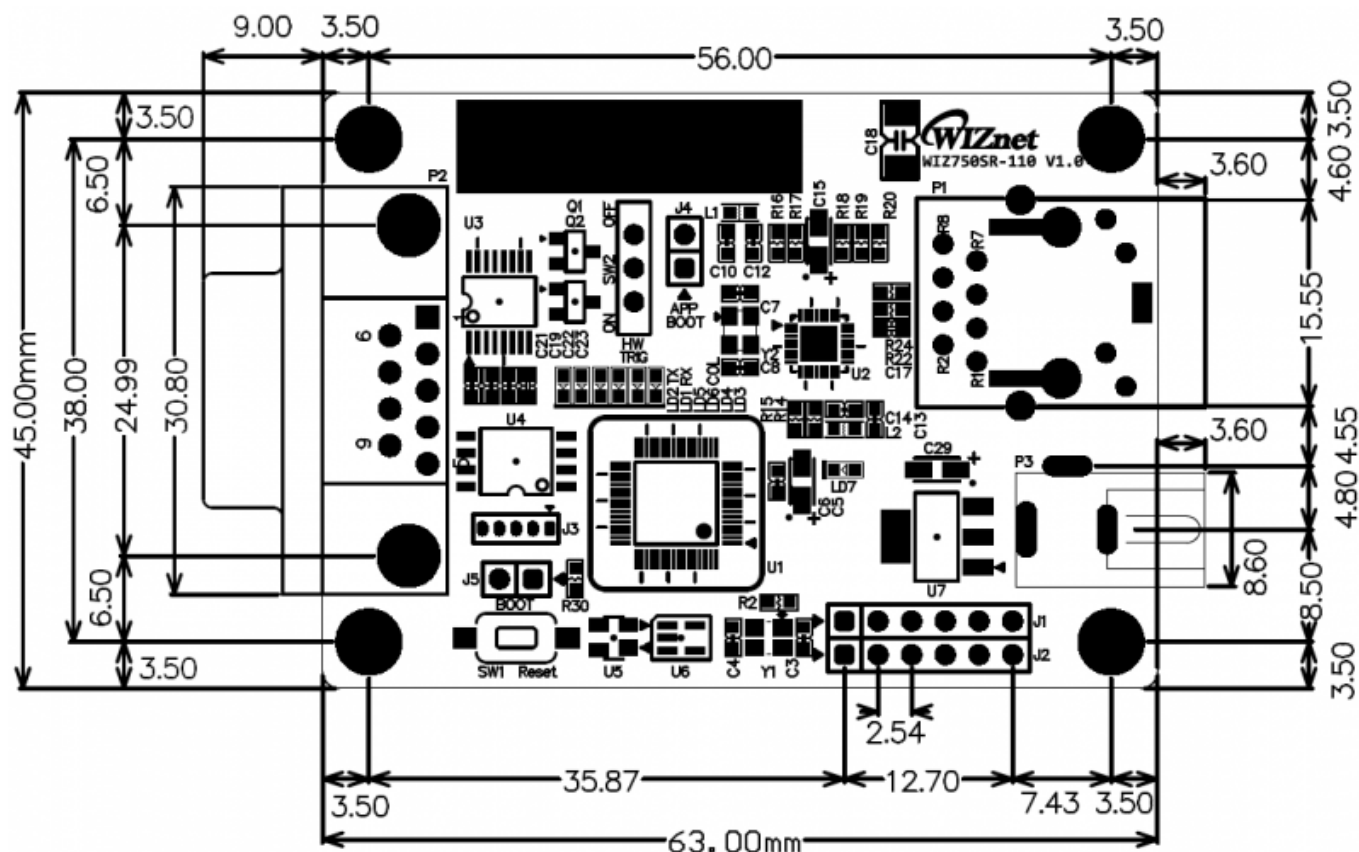

Navigation



Scroll to Top



Back to Product Main

WIZ750SR series Common Documents

- [User's Manual](#)

WIZ750SR Individual documents

- [WIZ750SR Product Overview](#)
- [WIZ750SR Getting Started Guide](#)

- [Device Command Manual](#)
- [Troubleshooting Guide](#)
- [Update History](#)

WIZ750SR series Downloads

- [Software Downloads](#)
- [Technical Reference](#)

- [WIZ750SR Datasheet](#)

WIZ750SR-100 Individual documents

- [WIZ750SR-100 Product Overview](#)
- [WIZ750SR-100 Getting Started Guide](#)
- [WIZ750SR-100 Datasheet](#)

WIZ750SR-105 Individual documents

- [WIZ750SR-105 Product Overview](#)
- [WIZ750SR-105 Getting Started Guide](#)
- [WIZ750SR-105 Datasheet](#)

WIZ750SR-110 Individual documents

- [WIZ750SR-110 Product Overview](#)
- [WIZ750SR-110 Getting Started Guide](#)
- [WIZ750SR-110 Datasheet](#)

From:
<http://wizwiki.net/wiki/> -

Document Wiki

Permanent link:
<http://wizwiki.net/wiki/doku.php/products:wiz750sr-110:datasheet:start>

Last update: 2018/08/03 16:11

